
Relay Socket Mounting Instructions

Top Mount & Bottom Mount


Mounting Instructions

MIL-PRF-12883/40, MIL-PRF-12883/41 MIL-PRF-12883/47, MIL-PRF-12883/48 MIL-PRF-12883/54, MIL-PRF-12883/55

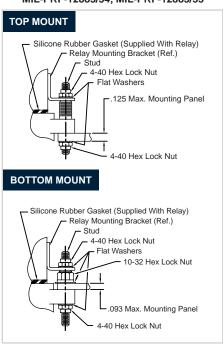


Mounting Instructions

Mircominature Relay Sockets

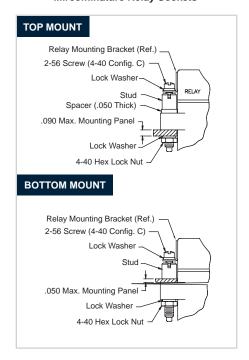

Mounting Instructions

MIL-PRF-12883/44, MIL-PRF-12883/45 MIL-PRF-12883/46

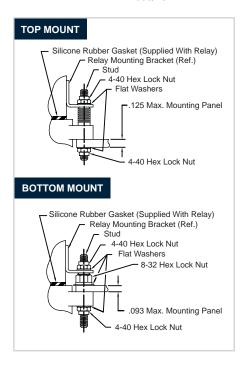

Mounting Instructions

Non-Environmental Solder Termination Relay Sockets

